



Einhell

EXPERT



Cordless Grass- and Bush Shear

GE-CG 18/100 Li-Solo

Item No.: 3410313

Ident No.: 21010

Bar Code: 4006825652710

The Einhell GE-CG 18/100 Li-Solo cordless grass and shrub shears is a high-performance member of the clever Power X-Change family. The grass cutting blade is perfectly designed for cutting lawn edges (100 mm). The laser-cut and diamond-ground shrub shears blades are ideally suited for trimming hedges and bushes. The tools are easy to change over without the need for any other tools. The soft grip provides a perfect grip and ergonomics during use. The covered gearing housing provides protection during use and when cleaning against contact with parts which are lubricated with gear oil. One 18 V PXC battery is needed for operation. The battery and charger are not included in the scope of this delivery – they are available separately.

Features & Benefits

- Member of the Power X-Change family, 1x18V batteries necessary
- Covered gearbox protecting customer to get in touch with gear oil
- Grass cutting blade used for perfect cutting result on edges
- Shrub shears blade for hedge and bush care
- Easy blade change without tools
- Laser-cut and diamond grinded blades
- Soft grip ensuring perfect grip and ergonomics
- Supplied without battery and charger (available separately)




Technical Data

- Cutting width with grass shear knife 100 mm
- Cutting length with shrub cutting knife 200 mm
- Cutting thickness with shrub cutting knife 8 mm
- Spacing between teeth of shrub cutting knife 8 mm

Logistic Data

- Product weight 1.06 kg
- Gross weight single packaging 1.25 kg
- Dimensions single packaging 350 x 115 x 137 mm
- Pieces per export carton 6 Pieces
- Gross weight export carton 8.41 kg
- Dimensions export carton 370 x 365 x 290 mm
- Container quantity (20"/40"/40"HC) 3780 | 8064 | 9216

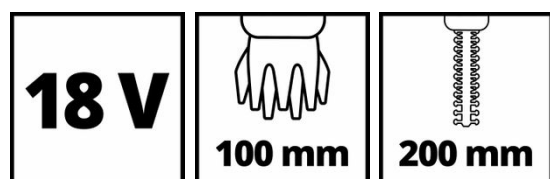

Available as special accessories



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 3,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512041
Bar Code: 4006825613698
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



2x 3,0Ah & 30min PXC Kit
PXC-Starter-Kit
Item No.: 4512098
Bar Code: 4006825646986
Einhell Accessory



18V 4,0Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory

Battery-Running-Times

running time (in min.)

Usage	trimming	
Unit of measure	min.	
1.5 Ah PXC	180	
2.0 Ah PXC	240	
2.5 Ah PXC	300	
2.6 Ah PXC+	320	
3.0 Ah PXC	360	
3.0 Ah PXC+	360	
4.0 Ah PXC	480	
5.2 Ah PXC+	650	
4-6 Ah PXC+ (4.0 Ah)	480	
4-6 Ah PXC+ (6.0 Ah)	720	